

USER MANUAL

Numeric Display Pager

Models : AL-301 / AF-301

P/N. GA9909ma3pfx

EXAMPLE :

- > Dial the number (626) 456-7890 and wait for the connected tone .
- > Then press *09 and a number you wish the person to call back 6265551212.

Then the pager will display as below

- > The pager will first display " I LOVE YOU ".
- > Secondly the pager will show " 6265551212".


Battery Information :

1. This pager uses only an AAA Alkaline battery Don't not use an " Heavy duty battery " or recharged battery .
2. When low battery shows on display , at the same time , the low battery Icon will also display , to remove the old battery , simply just side the battery door to the right to open . Align the new battery so the positive (+) and negative (-) markings are in proper position , and insert the new battery . Then press the On button to make sure the pager is in usable condition .

Features and Functions

- ✓ Smallest Size
- ✓ 16 Sets of Memories
- ✓ 8 Message Protection
- ✓ 10 Memory Phone Book
- ✓ 5 Alarm Settings
- ✓ Music Call Function
- ✓ Service Area Indicator
- ✓ Selectable 10 Melodies/ 4 Beep Tones/ Vibration/ Sleep Alerts
- ✓ Date and Clock Display
- ✓ Date and Time Stamp
- ✓ Selective Message Delete
- ✓ Delete All Message
- ✓ Memory Full Indication
- ✓ 60 Built In Alpha quick notes
- ✓ Private Sleep Time(AL-301 Only)

Control Buttons

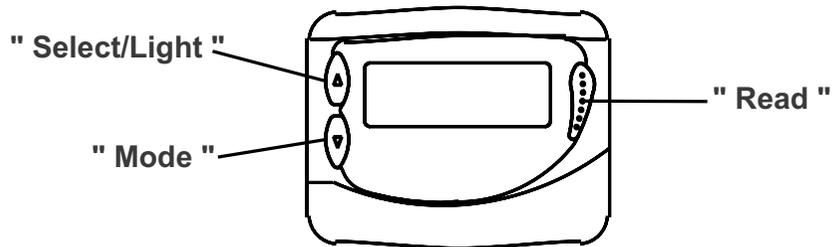

1. **Read button** - Use to turn on pager, read messages, and confirm time, date, and alarm settings.
2. **Mode button** - Use to scroll through and modify the pager's functions.
3. **Select/ Light button** - Used to activate the pager's back light, and confirm a specified selection.

CALL Phrase Message : When your friend pages you, they can add "*00"- "*59" (any choice) , to select Phrase message .

00. C-U-LATER	20. MALL	40. CALL MY CELL
01. TURN ON CELL	21. PLAY B-BALL	41. NO HURRY
02. HAPPY B-DAY	22. PLAY Q-BALL	42. CALL OFFICE
03. COME HOME	23. PLAY CARDS	43. LETS PLAY
04. CALL HOME	24. GO BOWLING	44. BEEP ME
05. DO NOT 4-GET	25. GO CRUISING	45. NEED 2 MEET
06. GOOD NIGHT	26. GO SHOPPING	46. CALL ME
07. HELLO	27. GO SWIMMING	47. TIME 4 LOVE
08. HOW ARE YOU?	28. HAVE LUNCH ?	48. CHANGE TIME
09. I LOVE YOU	29. HAVE DINNER ?	49. WANT 2 SEE U
10. I NEED YOU	30. WANNA GO EAT	50. SMILE 4 ME
11. I MISS YOU	31. WANNA HANG ?	51. ON TIME
12. NEED HELP	32. YES	52. DELAY
13. NEED INFO	33. NO	53. CANCEL
14. HURRY UP	34. MAY BE	54. APPOINTMENT
15. WAITING 4-U	35. CLUBBING	55. BIRTHDAY
16. EMERGENCY	36. MEETING	56. BEACH
17. MEET AT CAFE	37. SO COOL	57. VACATION
18. MOVIES	38. HI! BABY	58. DANCE
19. ARCADE	39. I DINNO	59. LEASE NOW

* Capable of linking up to 4 phrases

Message MODE

When a message is received, the pager displays 1 PAGE on the LCD and depending on the alert mode selected :

- BEEP Emits a 16 second beep alert
- MUSIC Melody plays twice
- VIBRATION 8 second vibration
- SLEEP No alert.

To stop any alert, press any button

REMINDER ALERTS

If no button is pressed after a message is received, a reminder alert will emit every 2 minutes (except Sleep mode)

TO READ A MESSAGE

Press the read button to read a message. If the message is continued, the mark ► displays - To continue, press the "READ" button again. Date and time are stamped on each message received.

LCD Display

- | | | | |
|---|------------------------------|---|---------------------|
|  | Day of the Week |  | Duplicate Message |
|  | Private Sleep Time |  | Low Battery Alert |
|  | Time Set Indicator |  | Message Lock |
|  | Beep Alert |  | Message Continued |
|  | Vibrate or Sleep Alert |  | Out of Service Area |
|  | Music Alert |  | Delete Message |
|  | Alarm | | |
|  | Telephone Directory | | |
|  | Message Number; A,B,C,D Tone | | |

POWER ON

Press and release the "READ" button. The pager alerts as it powers up. Now the pager is on standby.

POWER OFF

Press "MODE" button until OFF appears in the LCD window, Then press the "SELECT" button, When the pager is off, current time and alarm functions work normally. All messages that were received prior to turning the unit off will remain in memory.

When Complete, press the READ button. For alarms 2 to 5, after accessing alarm function press the right mode button once more for alarm #1 and again for alarm #5. Set them exactly the same way. To turn off any alarm, while in that alarm mode, change the "ON" to "OFF".

DIRECTORY

The directory(with the ability to store up to 10 numbers) can be used as an additional memory or as a phone book to store your important numbers. While reading a message, you can imprint a copy of the message into the directory. To do so press the " Select " button until a appears, and press the " Mode " button to imprint a copy into your directory (Please note that the directory can only store 12 digits per memory, and is unable to store alpha-numeric messages). To access your memory, press the " Select " button until " DIRECTORY " appears on the screen and press " Mode " button. Use the " Read " button to read through all your directory message. Messages stored in the directory can also be lock/unlock and Individually erased.

ALARM

The comes with an alarm function that will make the pager alert at a specified time everyday whether the pager is on or off, There are 5 separate alarms that can be set for different times of the day.

TO TURN ALARM ON/OFF

When the pager is initially turn on, press the right MODE button until " SET ALARM " appears on the LCD.

Press the left SELECT button once to enter alarm mode. To set alarm #1, press left SELECT button again and the word "OFF" will blink. To turn to ON, press right MODE button once.

Press left SELECT button once again then using the right MODE button change the hour of day to the desired number.

Press the left SELECT button once to go to the minutes and using the left MODE button, change the minutes to the desired number. Repeat for A for AM or P for PM.

(Continued)

SET ALERT

The pager has 3 standard alert modes, You can select one mode among audio (beep or music), vibration or sleep (no alert) with the "MODE" button while the pager is on.

AUDIBLE ALERTING

When the pager is initially turned on, it is automatically set to an AUDIO alert. To change this alert to another beep or melody, Press the "MODE" button until "SET ALERT?" is displayed on the LCD. Press the "SELECT" button once and the pager displays "AUDIO?" Choices include MUSIC melodies 1-10 and Beep alerts 1 4, Press the "SELECT" button again and the pager will display the current alert

(Continued)

choice, By pressing the "MODE" button, you can scan the 10 music melodies and 4 beep alerts. Choose the desired alert by pressing the "READ" button.

VIBRATION ALERT

VIBRATION will silently alert. To set, press the right "MODE" button until "SET ALERT?" is displayed. Press the "SELECT" button once, then the "MODE" button until the pager displays "SILENT?" on the display for vibration. When you make your selection, press the "READ" button.
(Continued)

TO SET TIME AND DATE

Press the right read button until "SET TIME?" appears on the LCD.

Press the left SELECT button once.

1. Use the right MODE button to pick the current day-of-the-week. The character letters appear in the top left of the display.

e.g., SUN=Sunday MON=Monday etc.

Then Press the left SELECT button once

2. Next, press the right MODE button to choose the Month e.g., 5=May 6=June etc.

Then Press the left SELECT button once

3. Next, press the right MODE button to choose the day-of-the-Month

TO ERASE ONE MESSAGE

Using the READ button, select message to be deleted. Press the MODE button until a scissors  icon appears at the top of the LCD. Then press the SELECT button. To delete message.

TO ERASE ALL

In standby mode while not viewing messages, press the DELETE MODE button until the works "CLEAR ALL?" appears on the display. Press the left SELECT button once. All unlocked messages are deleted.

NOTE:

The locked messages are not deleted In "CLEAR ALL " mode. To delete all messages In 'CLEAR ALL" mode. first make any locked messages unlocked.

SLEEP ALERT

SLEEP alert emits no alert at all. To set, press the right " MODE " button until SET ALERT? Is display Press the "SELECT" button once, then the "MODE" button until the pager displays "SLEEP?" on the display for no alert. When you make your selection, press the "SELECT" button and the pager displays "SLEEP ?" or "SLEEP ALL ?" for no alert, to press the "READ" button, When make your selection.

Private Sleep Time (AL-301 Only)

Press the "MODE" button once the pager display "SLEEP AUTO ?" Then press the "SELECT" button the pager displays "12:00P 12:00P". Setting time with no alert, forward is starting time, afterward is ending time, Use the "MODE" button to scroll through time, while utilizing the "SELECT" button to make any changes. Once completed, press "READ" button to confirm and return to the standby screen. If private sleep mode setting, the private sleep time icon  appears at the top of the LCD.

LCD BACKLIGHT

When needed, a backlight can be activated by pressing the "SELECT" button. The light will automatically shut off in 20 seconds after no activity. or press the " SELECT " button again to turn the light, off.

DUPLICATE MESSAGE INDICATOR

Messages received more than once will be mated with 

LOCKING

Locking a message can help prevent the accidental deletion of a message. Up to B messages can be locked at a time. Using the READ button, select message to be locked. Press the right mode button until the lock icon  appears at the top of the Then press the left SELECT button. Message has been locked and cannot be deleted unless unlocked.

UNLOCKING

To unlock a message, Using the READ button. select message to be unlocked., press the right MODE button once to remove the look . Message can now be deleted.