

# Contents

<b>Introduction</b> .....	<b>1</b>
Effective Use of Your Pager .....	1
<b>Getting Started</b> .....	<b>2</b>
Battery Information .....	2
Control Buttons (Bravo 500) .....	3
Control Buttons (Bravo 501) .....	4
Turning Your Pager On .....	5
Turning Your Pager Off .....	5
Backlight .....	6
Using the Main Menu .....	7
Status Indicators .....	7
<b>Time and Date</b> .....	<b>8</b>
Setting the Time .....	8
Setting the Date .....	8
Displaying the Date .....	9
Setting the Alarm .....	10
<b>Alerts</b> .....	<b>11</b>
Setting the Alert Type .....	11
Reminder Alert .....	12
Low Cell Alert .....	13
<b>Messages</b> .....	<b>14</b>
Reading Messages .....	14
Locking/Unlocking Messages .....	15
Message Information .....	15
Deleting Messages .....	16

## **Introduction**

Congratulations on your purchase of your Bravo Numeric pager.

This booklet contains operation instructions that explain how to use your new pager and provides helpful suggestions for first-time as well as experienced users.

### **Effective Use of Your Pager**

Your pager can help you keep in contact with everyone important to you. By giving your pager number to business associates, family, and friends, you can be contacted whenever needed.



## Getting Started

### Battery Information


Your pager operates with a single AAA-size alkaline battery (do not use carbon zinc batteries). See the diagram on the following page for the battery door location.

If **L O b A t** displays, the pager's AAA-size battery is low. Replace the AAA-size battery.

### Installing/Replacing the Battery

- 1 Turn the pager off (see “Turning Your Pager Off” on page 5).
- 2 Holding the pager face down, slide the battery door in the direction of the arrow (toward the outer edge).
- 3 Lift the battery door away from the pager's housing to remove it.
- 4 Remove the old battery, noting the positive (+) and negative (-) polarity markings.
- 5 Insert a new battery so the polarity markings on the battery match the polarity diagram in the battery compartment.


## Control Buttons (Bravo 500)

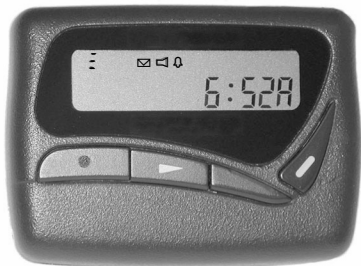

- **Function:** Press to move between features and change values.
- ▶ **Select/Backlight:** Press to select features and turn on/off the backlight.
- ▬ **Read/Escape:** Press to read messages or return to the Status screen.



## Control Buttons (Bravo 501)

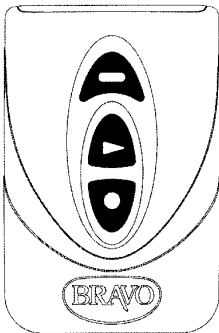

- **Function:** Press to move between features and change values.
- ▶ **Select/Backlight:** Press to select features and turn on/off the backlight.
- ▬ **Read/Escape:** Press to read messages or return to the Status screen.























